

Attentions:


1. Please read the owner's manual before use the product.
2. Use the distilled or boiled water only. Do not fill in with any other liquid except water.
3. Unplug the iron when you leave it, even for a short time and put it in a place not within the reach of children.
4. When filling water or pouring out remaining water. Please pull out the plug first.
5. After using, turn on the steam button, turn the temperature control to the "OFF" position, pull out the plug, and put the iron on the smooth and stable place vertically.

Vorsicht:

1. Stellen Sie sicher, dass die Stromanschluss Spannung dieselbe wie die Nennspannung des Gerätes ist und dass die Steckdose Erdung hat .
2. Wenn die Zuleitung beschädigt ist, muss sie von dem Hersteller, seinem Kundendienst oder qualifizierten Personen ersetzt werden, um Gefahr zu vermeiden.
3. Dieses Bügeleisen ist nur für den Hausgebrauch vorgesehen.
4. Tauchen Sie das Eisen zum Reinigen nicht in irgendeine Flüssigkeit.
5. Berühren Sie das heiße Metallteil, heißes Wasser oder Dampf nicht, um Verbrennungen zu vermeiden.
6. Das Bügeleisen muss auf einer stabilen Oberfläche benutzt und abgestellt werden.
7. Stellen Sie sicher, dass die Unterlage, auf der sich die Abstellvorrichtung befindet, stabil ist, wenn Sie das Bügeleisen auf dieser Abstellvorrichtung ablegen.
8. Das Bügeleisen darf nicht benutzt werden, wenn es heruntergefallen ist, falls es sichtbare Beschädigungen aufweist oder undicht ist.
9. Dieses Gerät ist nicht für Verwendung durch Kinder oder Personen ohne Hilfe oder Überwachung vorgesehen, wenn deren physische, sinnliche oder mentale Fähigkeiten sie davon abhalten, das Gerät sicher zu verwenden. Kinder müssen überwacht werden, um sicherzustellen, dass sie mit dem Gerät nicht herumspielen.

STEAM IRON

Model : Juro-Pro Lavanda

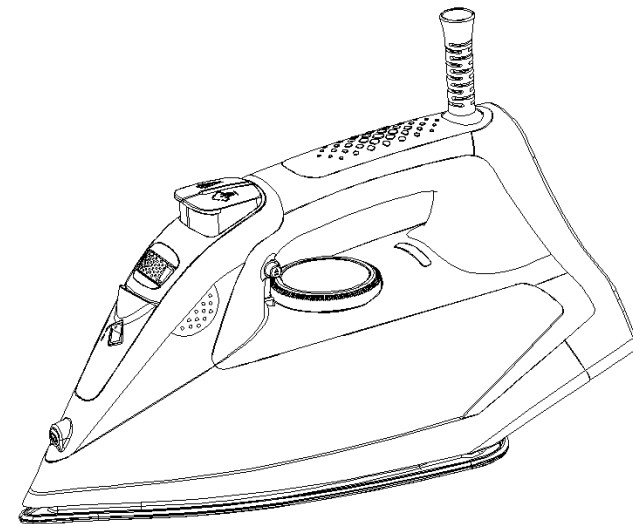


Please read these instructions for use and have a good look at the illustration before using the appliance

Main technical parameters:

Type	Rated voltage	Rated frequency	Rated power
AJ-2078-22	220-240V	50/60Hz	2000-2400W

Characteristics and structure:

The product has many functions such as temperature regulating, spraying, dry ironing, steam etc. And it with characteristics: luxury shape, high heat efficiency, easy using, good ironing result, work saving and time saving, and so on.

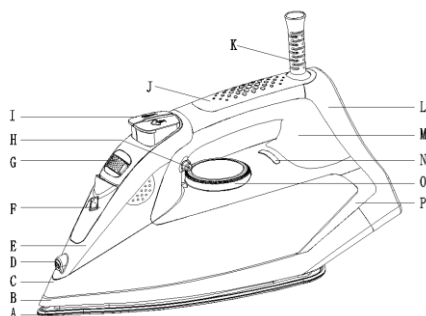

A: Soleplate

B: Skirt

C: Water tank

D: Spraying nozzle

E: Water front tank

F: Fill cover

G: Steam knob

H: Lock button

I: Spray & Burst steam button

J: Top handle

K: Cord guard

L: Top handle

N: Handle

M: Lens

O: Temperature dial

P: Decorative pieces

How to fill water:

1. Before filling water, please pull out the plug first.
2. Turn off the steam button, put the iron on the vertical way.
3. Press the lock button, and the water tank will come out automatically.
4. Take out the water tank and pull down the cover of water filling mouth, then fill water.
5. Pull up the cover of water filling mouth.

Insert the water tank to the body of iron, and put the iron on th

6. Insert the water tank to the body of iron, and put the iron on the level way.

How to Burst steam:

Set the temperature control at the “...” position, then press down the bursting steam button, the base plate will spray out bursting steam.

How to dry clean:

1. Turn the temperature control to “OFF” position, turn off the steam button and put the plug into the socket.
2. Turn the temperature control to the suitable position which the ironed clothes required, the indicator bulb will light up, then put the iron on the smooth and stable place vertically.
3. After the indicator goes out, you can begin to iron.

How to spray:

Turn on the spraying button, steam will be sprayed out from the spraying nozzle. At that time, you should keep enough water in the water tank.

How to self cleaning:

Set the temperature control to the maximum position, after heating, unplug the unit and press the self clean button for about 1 minute, strong steam will be sprayed to clean the steam chamber. Use the function once every two weeks

How to Anti-drip:

This iron is equipped with a drip stop function: the iron automatically stops steaming when the temperature is too low to prevent water from dripping out of the soleplate.

How to Anti-calc:

The Anti-calc function filtrate the minerals from the water to prevent mineral residue build up at the steam chamber.

